



Original	Replacement
 Power	 Power
 Netflix	 Shift + Red / Netflix /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 i	 Info / Angle
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 EXit	 Exit / Cancel / Clear
 World	 Smart / List
 Camera/Music/Ph	 Display / Media
 Guide	 Guide / EPG / -/--
 */o	 Picture / Format
 Games	 AV / Input / RDS





Original	Replacement	Original	Replacement
[=]/Text	GOTO TEXT Text / Goto		
Red	NETFLIX SEARCH Red / Netflix / Search		
Green	APP REPEAT Green / APP / Repeat		
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat		
Blue	Prime Video RANDOM Blue / Prime Video / Random		
LANG.	LANG I/II AUDIO Audio / Lang I/II		
[=]..	EQ SUBTITLE Subtitle / EQ		
[-O-]	SIZE ZOOM Zoom / Size		
<<	TUNE- << / Tune-		
	STEP-FREEZE    Pause / Step / Freeze		
>>	TUNE+ >> / Tune+		
●	REC MODE ● Rec / Rec Mode		
▶	SLOW ▶ Play / Slow		
■	HOLD ■ Stop / Hold		

