


 









 




Original	Replacement
 Power	 Power
 e/Energy Saving	 Display / Media
 AV Mode	 Shift + AV / Input / RDS
 Input	 AV / Input / RDS
 Tv/Rad	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Q.View	 Zoom / Size

Original	Replacement
 Vol+	 Vol+
 FAV/Mark	 Fav / Marker / PC
 P+	 CH+ / Page+
 Vol-	 Vol-
 Ratio	 Picture / Format
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Guide	 Guide / EPG / -/-
 Home	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Info	 Info / Angle





Original	Replacement	Original	Replacement
 Exit	 Exit / Cancel / Clear		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Text	 Text / Goto		
 T.Opt.	 Setup / OPT /		
 Subtitle	 Subtitle / EQ		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause/Freeze	 Pause / Step / Freeze		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Simplink	 Shift + Smart / List		
 AD	 Audio / Lang I/II		

