

 















 

















 














































































Original	Replacement	Original	Replacement
 Standby	 Power	 Audio	 Audio / Lang I/II
 Eject	 Eject / Surround	 OSD	 Display / Media
 1	 1	 Angle	 Shift + Info / Angle
 2	 2	 Zoom	 Zoom / Size
 3	 3	 Return	 Back / Return
 Subtitle	 Subtitle / EQ	 Title	 Sound / Title
 4	 4	 Up	 Up
 5	 5	 Menu	 Menu / Home
 6	 6	 Left	 Left
 Mute	 Mute / Dimmer	 Select	 OK
 7	 7	 Right	 Right
 8	 8	 Setup	 Setup / OPT /
 9	 9	 Down	 Down
 Goto	 Text / Goto	 PSM	 TV/Radio /
 +10	 Guide / EPG / -/-	 Play	 Play / Slow
 0	 0	 Stop	 Stop / Hold
 Clear	 Exit / Cancel / Clear	 Pause/Step	 Pause / Step / Freeze

Original	Replacement	Original	Replacement
 Standby	 Power	 Audio	 Audio / Lang I/II
 Eject	 Eject / Surround	 OSD	 Display / Media
 1	 1	 Angle	 Shift + Info / Angle
 2	 2	 Zoom	 Zoom / Size
 3	 3	 Return	 Back / Return
 Subtitle	 Subtitle / EQ	 Title	 Sound / Title
 4	 4	 Up	 Up
 5	 5	 Menu	 Menu / Home
 6	 6	 Left	 Left
 Mute	 Mute / Dimmer	 Select	 OK
 7	 7	 Right	 Right
 8	 8	 Setup	 Setup / OPT /
 9	 9	 Down	 Down
 Goto	 Text / Goto	 PSM	 TV/Radio /
 +10	 Guide / EPG / -/-	 Play	 Play / Slow
 0	 0	 Stop	 Stop / Hold
 Clear	 Exit / Cancel / Clear	 Pause/Step	 Pause / Step / Freeze





	Original	Replacement	Original	Replacement
REV	<<	TUNE- << / Tune-		
FWD	>>	TUNE+ >> / Tune+		
	I<<	PRESET- I<< / Preset-		
	>>I	PRESET+ >>I / Preset+		
SLOW	Slow	SHIFT + SLOW Play /		
REPEAT	Repeat	APP REPEAT Green / APP / Repeat		
A-B	A-B	YouTube REPEAT A-B Yellow / YouTube / Repeat		
P/N	P/N	TOP MENU D.MENU D.Menu / Top		
Key L	Key L	CH PAGE + CH+ / Page+		
Key #	Key #	CH PAGE - CH- / Page-		
Vol-	Vol-	VOL - Vol-		
Vol+	Vol+	VOL + Vol+		
INFO	Info	ANGLE INFO Info / Angle		
KEYBOARD	Keyboard	LIST SMART Smart / List		
IS	IS	PC FAV MARKER Fav / Marker / PC		
PS	PS	FORMAT PICTURE Picture / Format		

