


 

 


 


 

 

 
 




Original	Replacement
	Power
	Input
	TV / DVD
	abc
	List
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Mute
	Menu

Original	Replacement
	Subt
	-/--
	DVD Menu
	Img +
	Img -
	Up
	Right / >>
	Down
	Left / <<
	<<
	>>
	Play / Enter
	Play
	Vol +
	Vol -
	Eject
	Tools



