



Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 Mute	 Mute	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Menu	 Menu
 8	 8	 Exit	 Exit
 9	 9	 FAV	 Pre Ch
 0	 0	 SUBT	 Subt
 i	 INFO	 EPG	 Guide
 Recall	 BACK	 LIST	 List
 Vol+	 Vol +	 [≡]/Text	 Text
 Vol-	 Vol -	 [≡+]/Hold	 Options
 Nicam	 SMART	 [▼]/PgDn	 SHIFT + CH - Shift + Ch -





	Original		Replacement	
	[▲]/Pg Up		+	 Shift + Ch +
	[≡i]/Index		+	 Shift + Info
	[≡♦]/Size			Format
	[≡?]/Reveal			3D
	[≡o]/Subpage			Media
	Red			Red
	Green			Green
	Yellow			Yellow
	Cyan			Blue
	Sleep			Sleep
	Tv/Radio			TV/R
	Audio			Dual
	P.Mode		+	 Shift + Format

Original	Replacement

