
 
 

 



 
 

 
 
 
 

 

 
 
 

 

 


 

 

 
 

 


 




 
 
 

 





Original	Replacement	Original	Replacement
	Power		Return
	Info / Angle		Back / Return
	1		Vol+
	2		Vol-
	3		Up
	4		Down
	5		Right
	6		Left
	7		CH List
	8		Enter / CH List
	9		Smart / List
	0		OK
	Input Select		CH+ / Page+
	AV / Input / RDS		CH- / Page-
	Picture / Format		Audio / Lang I/II
	Picture / Format		Text / Goto
	Guide / EPG / -/--		Text / Goto
	Guide / EPG / -/--		Text / Goto
	Mute / Dimmer		Fav / Marker / PC
	Mute / Dimmer		Fav / Marker / PC
	Menu / Home		Fav / Marker / PC
	Menu / Home		Fav / Marker / PC
			Subtitle / EQ
			Subtitle / EQ
			Pause / Step / Freeze
			Pause / Step / Freeze



