
 




 
 




	Original	Replacement		Original	Replacement
	Power		Power		0
	Up		Up		Guide
	Down		Down		Back
	Right		Right		Ch +
	Left		Left		Ch -
	OK		Ok		Pre Ch
	M		Menu		Vol +
	[i]		Info		Vol -
	1		1		Mute
	2		2		Dual
	3		3		TV/R
	4		4		AV
	5		5		Red
	6		6		Green
	7		7		Yellow
	8		8		Blue
	9		9		Text





Original		Replacement		Original		Replacement	
	[≡o]	HOME SMART	Smart				
	[≡+]	PICTURE FORMAT	Format				
	[≡x]/[· ·]	ECO 3D	3D				
	[ /≡]/[*]	AD SUBT	Subt				
	[≡♦]/[+]	SETTINGS OPT	Options				
	[≡?]/PC	APP MEDIA	Media				
	[≡i]	DISC NAV LIST	List				

