








 




 

 











 









Original	Replacement	Original	Replacement
	Mute / Dimmer		Red / Netflix / Search
	Power		Green / APP / Repeat
	1		Yellow / YouTube / Repeat
	2		Blue / Prime Video / Random
	3		Vol+
	4		Up
	5		Left
	6		OK
	7		Right
	8		CH+ / Page+
	9		Vol-
	Setup / OPT /		Down
	0		CH- / Page-
	Display / Media		Back / Return
	Picture / Format		Info / Angle
	Shift + 9		<< / Tune-
	Text / Goto		I<< / Preset-



