



| Original   | Replacement   | Original  | Replacement   |
|--|---|---|---|
|  Power    |  Power                   |  Up      |  Up                    |
|  EPG      |  Guide / EPG / -/--      |  Display |  Display / Media       |
|  REP      |  TV/Radio /              |  Left    |  Left                  |
|  Mute     |  Mute / Dimmer           |  OK      |  OK                    |
|  Rec List |  Shift + Rec / Rec Mode  |  Right   |  Right                 |
|  CH List  |  Smart / List            |  Menu    |  Menu / Home           |
|  Subtitle |  Subtitle / EQ           |  Down    |  Down                  |
|  Eject    |  Eject / Surround        |  Exit    |  Exit / Cancel / Clear |
|  Rec      |  Rec / Rec Mode          |  1       |  1                     |
|  Stop    |  Stop / Hold            |  2      |  2                    |
|  I<<    |  I<< / Preset-         |  3     |  3                   |
|  >>I    |  >>I / Preset+         |  4     |  4                   |
|  Pause  |  Pause / Step / Freeze |  5     |  5                   |
|  Play   |  Play / Slow           |  6     |  6                   |
|  <<     |  << / Tune-            |  7     |  7                   |
|  >>     |  >> / Tune+            |  8     |  8                   |
|  Source |  AV / Input / RDS      |  9     |  9                   |





| Original | Replacement                 |
|----------|-----------------------------|
| 0        | 0                           |
|          | Back / Return               |
|          | Fav / Marker / PC           |
| Vol +    | Vol+                        |
|          | Picture / Format            |
|          | Audio / Lang I/II           |
| CH +     | CH+ / Page+                 |
| Vol -    | Vol-                        |
|          | Sound / Title               |
|          | Sleep / Timer               |
| CH -     | CH- / Page-                 |
|          | Red / Netflix / Search      |
|          | Green / APP / Repeat        |
|          | Yellow / YouTube / Repeat   |
|          | Blue / Prime Video / Random |
|          | Setup / OPT /               |
|          | D.Menu / Top                |

| Original | Replacement             |
|----------|-------------------------|
|          | Shift + Sound / Title   |
|          | Shift + Display / Media |
|          | Shift + Smart / List    |
|          | Zoom / Size             |
|          | Text / Goto             |
|          | Info / Angle            |



Cancel Menu