

 
 
 


 


 






 
 


 



 

 


 





 










Original	Replacement	Original	Replacement
On/Off	 Power	Display	 +  Shift + Info
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Info	 Info	Menu audio	 Dual
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Menu Left	 Left	6	 6
OK Enter	 Ok	7	 7



Original	Replacement	
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Tone-		I<<
Yellow		Yellow
Blue		Blue
Off/Tim	 + 	Shift + Options
On/Tim		Options
Color+ P.Std		Format
Contrast+	 + 	Shift + Ch +
Color- S.Std	 + 	Shift + Dual
Contrast-	 + 	Shift + Ch -
Surround	 + 	Shift + Red

Original	Replacement	
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow
Audio-	 + 	Shift + Vol -
Audio+	 + 	Shift + Vol +
Level R/Woofer	 + 	Shift + Blue

