


 




 



 

 

 




Original	Replacement
TV	TV/R
Video	Smart
PC	Media
Text	Text
P+	Ch +
Up	Up
P-	Ch -
Down	Down
Right	Right
Vol+	Vol +
Left	Left
Vol-	Vol -
Menu	Menu
Menu	Ok
Mute	Mute
Red / M	Red
Green	Green

Original	Replacement
Yellow	Yellow
Blue	Blue
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/-	Guide
L / ?	List
Freeze	Pause
M/S	Options
PIP	3D





	Original	Replacement		Original	Replacement
	Auto	 Back			
	F[+]	 Format			
	i	 Info			
	F1	 Shift + 1			
	Clock	 AV			
	F2	 Shift + 2			
	F3	 Shift + 3			
	F4	 Shift + 4			
	Power	 Power			

