














 
 
 



 

 

 
 


 
 
 

 




 


 



 
 


 

 

 
 
 

 

 



 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Sleep	 Sleep	 Vol-	 Vol -
 Timer Play	 Eject	 Mute	 Mute
 Clock/Timer	 Shift + AV	 Radio/Ext-IN	 Text
 Program	 Shift + Sleep	 USB	 AV
 1	 1	 CD	 TV/R
 2	 2	 I<<	 I<<
 3	 3	 Play/Pause	 Play
 4	 4	 >>I	 >>I
 5	 5	 <<	 <<
 6	 6	 Stop	 Stop
 7	 7	 >>	 >>
 8	 8	 D.Bass	 Subt
 9	 9	 Sound	 Dual
 0	 0	 Preset EQ	 Back
 +10	 Guide	 Auto Preset	 Options
 DEL	 Exit	 Play Menu	 D. Menu





Original		Replacement		Original		Replacement	
	Radio Menu		Menu				
	Display-Dimmer		Info				
	Auto Off		Format				
	Up		Up				
	Down/Album		Down				
	Right		Right				
	Left		Left				
	OK		Ok				

