

 

 

 































Original	Replacement	Original	Replacement
	Power		Up
	My Choice		Down
	Clock		Right
	[≡]/Smart Tv		Left
	Channel Grid		Ok
	Alarm		Back
	[□≡]/Smart Info		Ch -
	Source		Ch +
	[]/Tv		Vol +
	[<>]/Format		Vol -
	Home		Mute
	Play		Red
	Pause		Green
	≡/Guide		Yellow
	[i]/Info		Blue
	/Adjust		1
	[-]/Options		2



