 

 
 


 

 














 

 




Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep
	Mute		Mute		Vol +		Vol +
	1		1		Vol -		Vol -
	2		2		Menu		Menu
	3		3		Exit		Exit
	4		4		Up		Up
	5		5		Left		Left
	6		6		Enter		Ok
	7		7		Right		Right
	8		8		Down		Down
	9		9		Source		AV
	0		0		EPG		Guide
	FAV		Pre Ch		Nicam		Options
	Recall		Back		P.Mode		Shift + Format
	CH +		Ch +		S.Mode		Shift + Dual
	CH -		Ch -		P.Size		Format
	Display		Info		Red / Goto		Red





Original	Replacement
Green / Slow	Green
Yellow / Repeat	Yellow
Yellow / Repeat	+  Shift + Text
Blue / A-.B	Blue
Media	Media
Play/Pause / Text	Play
Play/Pause / Text	Pause
Play/Pause / Text	Text
Stop / Index	Stop
Rec / PVR	Rec
I<< / Hold	I<<
>>I / Size	>>I
<< / S.Page	<<
>> / Reveal	>>
FAV +	+  Shift + Up
FAV -	+  Shift + Down
Auto	Smart

Original	Replacement
S.Title	Subt
Audio	Dual
Freeze	+  Shift + Pause
Radio	TV/R
3D	3D

