


 




Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	Pause / Stop		Pause		Left / <<		Left
	Pause / Stop		Stop		Left / <<<		<<<
	l<<<		l<<<		Right / >>>		Right
	>>>l		>>>l		Right / >>>		>>>
	CH +		Ch +		Play / Enter		Ok
	CH -		Ch -		Play / Enter		Play
	Vol +		Vol +		Down		Down
	Vol -		Vol -		[....]		Subt
	*		Smart		Open / Close		Eject
	Input		AV		Zoom		Shift + Eject
	TV / DVD Mode		TV/R		[ + ]		Info
	Mute		Mute		1		1
	Language		Dual		2		2
	DVD Menu		D. Menu		3		3
	DVD Menu		Menu		4		4
	Tools		Options		5		5





	Original	Replacement		Original	Replacement
			6		
			7		
			8		
			9		
			0		
			--		

