









 



 





 



 

 



 












 



 

 

 

 
 




 









Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	CH/Level Up		Ch +		<<		<<
	CH/Level Down		Ch -		>>		>>
	Vol+		Vol +		<<		<<
	Vol-		Vol -		>>		>>
	Mute		Mute		1		1
	Marker		Media		2		2
	Up		Up		3		3
	Down		Down		4		4
	Right		Right		5		5
	Left		Left		6		6
	Enter		Ok		7		7
	Setup		Options		8		8
	Menu		Menu		9		9
	Display / Sleep		Info		0		0
	Display / Sleep		Sleep		6CH Dir		3D
	Return/Dimmer		Back		CH Sel		TV/R





Original	Replacement
Adjust	List
Delay	Exit
P.Scan	D. Menu
T.Tone	Text
Auto	Subt
DSP	AV
Stereo	Dual
CD	Green
AUDIO	Red
AUX	Yellow
TV	Blue
VCR	Shift + Red
SAT	Shift + Blue
CABLE	Shift + Yellow
DVD	Shift + Green
AUX Power /	Shift + Power
AUX P.Scan	Shift + Smart

Original	Replacement
AUX Rec	Shift + Rec
AUX Pause	Shift + Pause
AUX Play	Shift + Play
AUX Stop	Shift + Stop
AUX <<	Shift + <<
AUX >>	Shift + >>
AUX >>	Shift + >>
AUX <<	Shift + <<





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 TV Power	 Power
 TV CH/Level +	 Ch +
 TV CH/Level -	 Ch -
 TV CH Sel.	 Media
 TV Mute	 Mute
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 TV 1	 1
 TV 2	 2

Original	Replacement
 TV 3	 3
 TV 4	 4
 TV 5	 5
 TV 6	 6
 TV 7	 7
 TV 8	 8
 TV 9	 9
 TV 0	 0
 CABLE Power	 Shift + Power
 CABLE CH/Level +	 Shift + Ch +
 CABLE CH/Level -	 Shift + Ch -
 CABLE CH Sel.	 Shift + Smart
 CABLE Mute	 Shift + Mute
 CABLE Volume +	 Shift + Vol +
 CABLE Volume -	 Shift + Vol -
 CABLE 1	 Shift + 1
 CABLE 2	 Shift + 2






 

Original	Replacement
AUDIO	Red
CD	Green
AUX	Yellow
TV	Blue
VCR	Shift + Red
DVD	Shift + Green
SAT	Shift + Blue
CABLE	Shift + Yellow
DVD Power	Power
DVD P.Scan	Smart
DVD T.Tone	Options
DVD Audio Sel.	Dual
DVD Subtitle	Subt
DVD Zoom	3D
DVD Marker	Pre Ch
DVD Menu	Menu
DVD Up	Up

Original	Replacement
DVD Left	Left
DVD Enter	Ok
DVD Right	Right
DVD Down	Down
DVD Display	Info
DVD Pause	Pause
DVD Play	Play
DVD Stop	Stop
DVD <<	<<
DVD >>	>>
DVD I<<	I<<
DVD >>I	>>I
DVD 1	1
DVD 2	2
DVD 3	3
DVD 4	4
DVD 5	5





Original	Replacement
 DVD 6	 6
 DVD 7	 7
 DVD 8	 8
 DVD 9	 9
 DVD 0	 0
 SAT Power	 Shift + Power
 SAT CH/Level +	 Shift + Ch +
 SAT CH/Level -	 Shift + Ch -
 SAT CH Sel.	 Shift + Media
 SAT Mute	 Shift + Mute
 SAT Volume +	 Shift + Vol +
 SAT Volume -	 Shift + Vol -
 SAT 1	 Shift + 1
 SAT 2	 Shift + 2
 SAT 3	 Shift + 3
 SAT 4	 Shift + 4
 SAT 5	 Shift + 5

Original	Replacement
 SAT 6	 Shift + 6
 SAT 7	 Shift + 7
 SAT 8	 Shift + 8
 SAT 9	 Shift + 9
 SAT 0	 Shift + 0





	Original	Replacement	
	AUDIO		Red
	CD		Green
	AUX		Yellow
	TV		Blue
	VCR		Shift + Red
	SAT		Shift + Blue
	CABLE		Shift + Yellow
	DVD		Shift + Green
	CD P.Scan		Smart
	CD Pause		Pause
	CD Play		Play
	CD Stop		Stop
	CD I<<		I<<
	CD >>I		>>I
	CD 1		1
	CD 2		2
	CD 3		3

	Original	Replacement	
	CD 4		4
	CD 5		5
	CD 6		6
	CD 7		7
	CD 8		8
	CD 9		9
	CD 0		0
	VCR Power		Shift + Power
	VCR CH Sel.		Shift + Media
	VCR Rec		Shift + Rec
	VCR Play		Shift + Play
	VCR Mute		Shift + Mute
	VCR >>		Shift + >>
	VCR <<		Shift + <<
	VCR Volume -		Shift + Vol -
	VCR Volume +		Shift + Vol +
	VCR CH/Level +		Shift + Ch +



