



Original	Replacement
 Power	 Power
 Open / Close	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 +  Shift + Guide
 Mute	 Mute
 Title/TTX	 Text
 Menu	 Menu
 Display	 Info

Original	Replacement
 Prog / EPG	 Guide
 Prog / EPG	 Sleep
 PBC	 Smart
 GOTO	 Media
 Vol -	 Vol -
 Vol +	 Vol +
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 Setup	 Options
 Return	 Back
 Up	 Up
 Left / Fav-	 Left
 Enter	 Ok
 Right / FAV+	 Right
 Source	 AV
 TV / Radio	 TV/R





Original		Replacement		Original		Replacement	
	<< REV		<<				
	>> FWD		>>				
	I<< Prev		I<<				
	>>I Next		>>I				
	3D		3D				
	Subtitle		Subt				
	Zoom		Eject				
	Mode		Format				
	Digest		D. Menu				
	Language		Dual				
	L / R		Yellow				
	P / N		Blue				
	Repeat		Shift + Text				
	A-B		Shift + TV/R				
	Angle		Shift + Smart				
	Slow		Shift + Pause				
	Down		Down				

