

 



 


 

 
 
 

 
 
 
 
 









Original	Replacement
 Standby	 Power
 Subtitle	 Subt
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep
 Size	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Text	 Text
 Recall	 Back
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 EPG	 Guide
 CH +	 Ch +
 CH -	 Ch -
 Audio	 Dual
 i / Display	 Info
 TV / Radio	 TV/R
 Rec	 Rec
 T-Shift	 Media
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right





Original	Replacement	Original	Replacement
 Down	 Down		
 Menu	 Menu		
 Exit	 Exit		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Reveal	 Smart		
 Index	 Shift + Info		
 Play/Pause / Hold	 Play		
 Play/Pause / Hold	 Pause		
 I<< / Cancel	 I<<		
 >>I / Subpage	 >>I		
 Stop / Fav	 Stop		
 Stop / Fav	 Pre Ch		
 << / Fav -	 <<		
 >> / Fav +	 >>		

