



 



 







 



 



 



 



 



 

 

 






















 







Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Mute	 Mute / Dimmer	 Home	 Menu / Home
 1	 1	 P-	 CH- / Page-
 2	 2	 *	 D.Menu / Top
 3	 3	 Up	 Up
 4	 4	 i	 Info / Angle
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Back	 Back / Return
 9	 9	 Down	 Down
 EPG	 Guide / EPG / -/--	 Exit	 Exit / Cancel / Clear
 0	 0	 Netflix	 Shift + Red / Netflix /
 TXT	 Text / Goto	 YouTube	 Shift + Yellow / YouTube /
 Vol+	 Vol+	 *1	 Smart / List
 Input	 AV / Input / RDS	 *2	 Display / Media
 P+	 CH+ / Page+	 Red	 Red / Netflix / Search





	Original	Replacement	Original	Replacement
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	<<	 << / Tune-		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Audio	 Audio / Lang I/II		

