

 



 



 




 


 
 









 











 



 

 

 

 




 


 





 






 


 





Original		Replacement		Original		Replacement	
	Power		Power		Vol+		Vol +
	Mute		Mute		Vol-		Vol -
	Sleep		Sleep		Left		Left
	Nicam/A2		Dual		Enter		Ok
	Still		Pause		1		1
	16:9		Format		2		2
	NR.		Options		3		3
	Surround		List		4		4
	Picture	 + 	Shift + Format		5		5
	Tv/Av		AV		6		6
	Display		Info		7		7
	Sound	 + 	Shift + Dual		8		8
	Up		Up		9		9
	CH+		Ch +		0		0
	CH-		Ch -		-/--		Guide
	Down		Down		Recall		Pre Ch
	Right		Right		Red		Red





	Original	Replacement	Original	Replacement
	Green			
	Yellow			
	Cyan			
	Index			
	Cancel			
	Subpage			
	Size			
	Hold			
	Reveal			
	PIP Window			
	PIP Position			
	PIP Swap			
	TXT/CC			
	PIP Size			
	PIP On/Off	