

 



 



 




 


 
 









 











 



 

 

 

 




 


 





 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 Sleep	 Sleep	 Left	 Left
 Nicam/A2	 Dual	 Enter	 Ok
 Still	 Pause	 1	 1
 16:9	 Format	 2	 2
 NR.	 Options	 3	 3
 Surround	 List	 4	 4
 Picture	 Shift + Format	 5	 5
 Tv/Av	 AV	 6	 6
 Display	 Info	 7	 7
 Sound	 Shift + Dual	 8	 8
 Up	 Up	 9	 9
 CH+	 Ch +	 0	 0
 CH-	 Ch -	 -/--	 Guide
 Down	 Down	 Recall	 Pre Ch
 Right	 Right	 Red	 Red





	Original	Replacement	
	Green		Green
	Yellow		Yellow
	Cyan		Blue
	Index		D. Menu
	Cancel		Exit
	Subpage		Subt
	Size		Eject
	Hold		Stop
	Reveal		Menu
	PIP Window	 + 	Shift + Media
	PIP Position	 + 	Shift + Smart
	PIP Swap		Smart
	TXT/CC		Text
	PIP Size		Media
	PIP On/Off	 + 	Shift + Power

Original	Replacement

