 


| Original | Replacement          | Original | Replacement                 |
|----------|----------------------|----------|-----------------------------|
|          | TV Direct            |          | Smart / List                |
|          | Power DVD            |          | Red / Netflix / Search      |
|          | Power VCR            |          | Green / APP / Repeat        |
|          | Power Audio          |          | Power                       |
|          | Power STB            |          | Yellow / YouTube / Repeat   |
|          | Power TV             |          | Blue / Prime Video / Random |
|          | DVD                  |          | 2                           |
|          | VCR                  |          | 4                           |
|          | TV                   |          | 1                           |
|          | FM/AM                |          | 6                           |
|          | Tv/Video             |          | 5                           |
|          | Muting               |          | Mute / Dimmer               |
|          | Channel+             |          | CH+ / Page+                 |
|          | Volume+              |          | Vol+                        |
|          | Channel-             |          | CH- / Page-                 |
|          | Volume-              |          | Vol-                        |
|          | Display/On           |          | Display / Media             |
|          | Dimmer               |          | Shift + Mute / Dimmer       |
|          | Sleep                |          | Sleep / Timer               |
|          | Analog/Digital Input |          | AV / Input / RDS            |
|          | Smart S Setup        |          | Setup / OPT /               |
|          | Bass Boost           |          | Audio / Lang I/II           |
|          | C. Tone              |          | Subtitle / EQ               |
|          | A. Position          |          | D.Menu / Top                |
|          | Test Tone            |          | Text / Goto                 |
|          | Effect               |          | Info / Angle                |
|          | Decode               |          | TV/Radio /                  |
|          | Surround             |          | Eject / Surround            |
|          | Subwfr+              |          | Right                       |
|          | Center+              |          | Up                          |
|          | Surr L+              |          | Shift + Vol+                |
|          | Surr R+              |          | Shift + CH+ /               |
|          | Subwfr-              |          | Left                        |
|          | Center-              |          | Down                        |

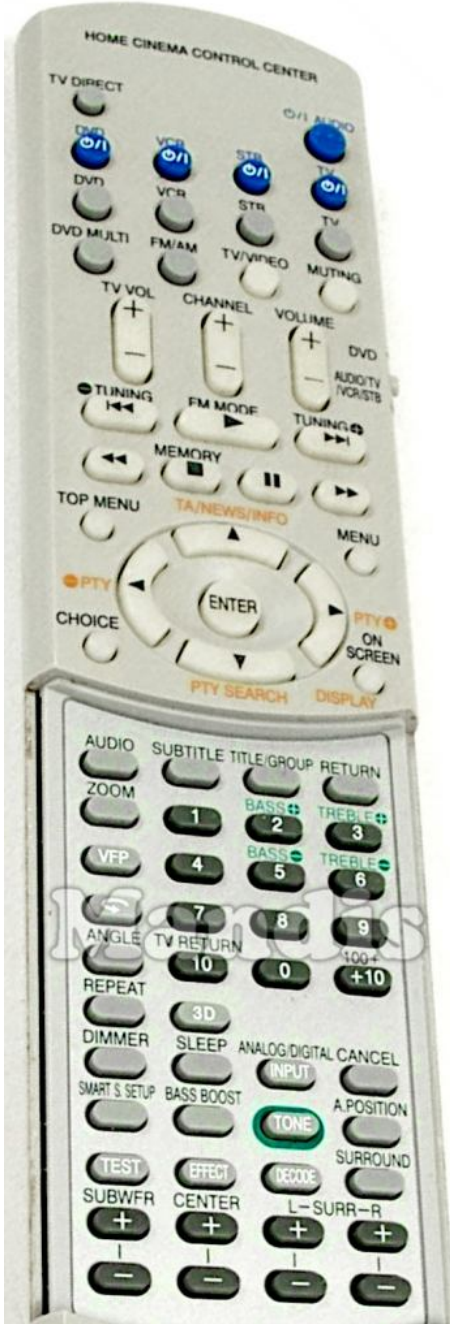






| Original      | Replacement            |
|---------------|------------------------|
| Power Audio   | Power                  |
| Power Tv      | +  Shift + Power       |
| FM/AM         | Eject / Surround       |
| Tv Vol+       | Vol+                   |
| Channel+ TV   | CH+ / Page+            |
| Tv Vol-       | Vol-                   |
| Channel- TV   | CH- / Page-            |
| Tuning- FM/AM | << / Tune-             |
| FM Mode FM/AM | Smart / List           |
| Tuning+ FM/AM | >> / Tune+             |
| Memory FM/AM  | Menu / Home            |
| TA/News/Info  | Info / Angle           |
| TA/News/Info  | Up                     |
| PTY- FM/AM    | Left                   |
| PTY+ FM/AM    | Right                  |
| PTY Search    | Down                   |
| PTY Search    | Red / Netflix / Search |

| Original      | Replacement     |
|---------------|-----------------|
| Display FM/AM | Display / Media |
| 1 FM/AM       | +  Shift + 1    |
| 1 TV          | 1               |
| 2 FM/AM       | +  Shift + 2    |
| 2 TV          | 2               |
| 3 FM/AM       | +  Shift + 3    |
| 3 TV          | 3               |
| 4 FM/AM       | +  Shift + 4    |
| 4 TV          | 4               |
| 5 FM/AM       | +  Shift + 5    |
| 5 TV          | 5               |
| 6 FM/AM       | +  Shift + 6    |
| 6 TV          | 6               |
| 7 FM/AM       | +  Shift + 7    |
| 7 TV          | 7               |
| 8 FM/AM       | +  Shift + 8    |
| 8 TV          | 8               |



 FM/AM



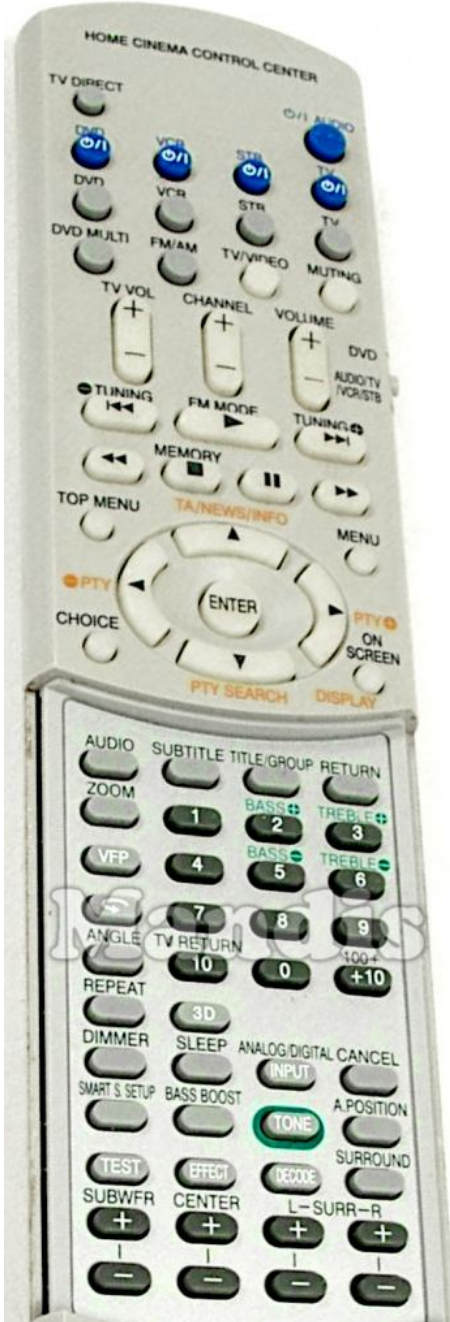

| Original  | Replacement             |
|-----------|-------------------------|
| Power DVD | Power                   |
| I<<       | I<< / Preset-           |
| Play      | Play / Slow             |
| >>I       | >>I / Preset+           |
| <<        | << / Tune-              |
| Stop      | Stop / Hold             |
| Pause     | Pause / Step / Freeze   |
| Top Menu  | D.Menu / Top            |
| >>        | >> / Tune+              |
| Up        | Up                      |
| Menu      | Menu / Home             |
| Left      | Shift + Left            |
| Enter     | OK                      |
| Right     | Right                   |
| Set Up    | Setup / OPT /           |
| Down      | Down                    |
| On Screen | Shift + Display / Media |

| Original        | Replacement           |
|-----------------|-----------------------|
| Audio           | Audio / Lang I/II     |
| Subtitle        | Subtitle / EQ         |
| Title Group     | Shift + Sound / Title |
| Return          | Back / Return         |
| DVD Zoom        | Zoom / Size           |
| 1               | 1                     |
| 2               | 2                     |
| 3               | 3                     |
| VFP Progressive | Smart / List          |
| 4               | 4                     |
| 5               | 5                     |
| 6               | 6                     |
| ←               | Left                  |
| 7               | 7                     |
| 8               | 8                     |
| 9               | 9                     |
| Angle           | Info / Angle          |







| Original    | Replacement               | Original | Replacement       |
|-------------|---------------------------|----------|-------------------|
|             | +                         |          | +                 |
| Power VCR   | Shift + Power             | 3 VCR    | Shift + 3         |
|             |                           |          |                   |
| Power STB   | Power                     | 3 STB    | 3                 |
|             | +                         |          | +                 |
| VCR         | Shift + Guide / EPG / -/- | 4 VCR    | Shift + 4         |
|             |                           |          |                   |
| Muting      | Mute / Dimmer             | 4 STB    | 4                 |
|             |                           |          | +                 |
| Channel+    | CH+ / Page+               | 5 VCR    | Shift + 5         |
|             |                           |          |                   |
| Volume+     | Vol+                      | 5 STB    | 5                 |
|             |                           |          | +                 |
| Channel-    | CH- / Page-               | 6 VCR    | Shift + 6         |
|             |                           |          |                   |
| Volume-     | Vol-                      | 6 STB    | 6                 |
|             |                           |          | +                 |
| Play VCR    | Play / Slow               | 7 VCR    | Shift + 7         |
|             |                           |          |                   |
| << VCR      | << / Tune-                | 7 STB    | 7                 |
|             |                           |          | +                 |
| Stop/Memory | Stop / Hold               | 8 VCR    | Shift + 8         |
|             |                           |          |                   |
| Pause VCR   | Pause / Step / Freeze     | 8 STB    | 8                 |
|             |                           |          | +                 |
| >> VCR      | >> / Tune+                | 9 VCR    | Shift + 9         |
|             | +                         |          |                   |
| 1 VCR       | Shift + 1                 | 9 STB    | 9                 |
|             |                           |          |                   |
| 1 STB       | 1                         | +10 TV   | Guide / EPG / -/- |
|             | +                         |          | +                 |
| 2 VCR       | Shift + 2                 | 0 VCR    | Shift + 0         |
|             |                           |          |                   |
| 2 STB       | 2                         | 0 STB    | 0                 |

