


Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	TV		TV/Radio /
	Dec		D.Menu / Top
	Violet/Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Live		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	Advance		Display / Media
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

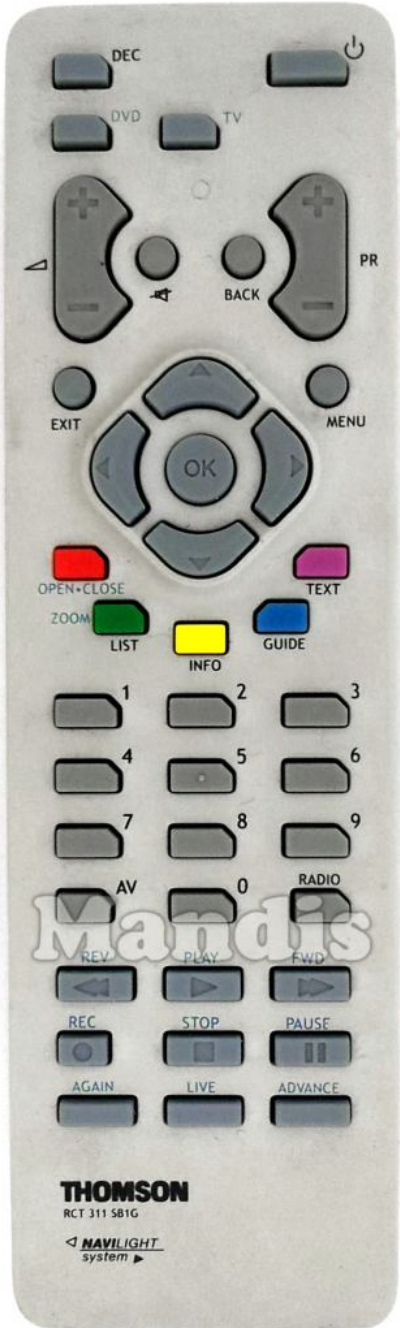




Original		Replacement	
	9		9
	0		0
OPEN-CLOSE	Red/Open/Close	SEARCH	Red / Netflix / Search
LIST	Green/Zoom/Lis	REPEAT	Green / APP / Repeat
INFO	Yellow/Info	REPEAT A-B	Yellow / YouTube / Repeat
GUIDE	Blue/Guide	RANDOM	Blue / Prime Video / Random
	Radio	+	Shift + TV/Radio / Program
	Again	+	Shift + Back / Return
	DVD	+	Shift + 2

Original	Replacement




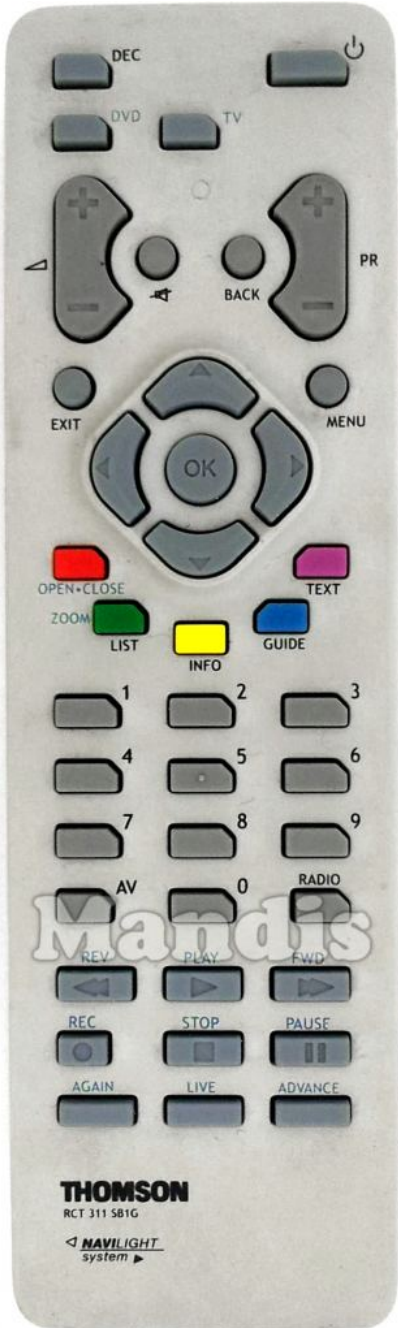

Original	Replacement
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	TV/Radio /
	D.Menu / Top
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up
	Left
	OK
	Right


Original	Replacement
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8



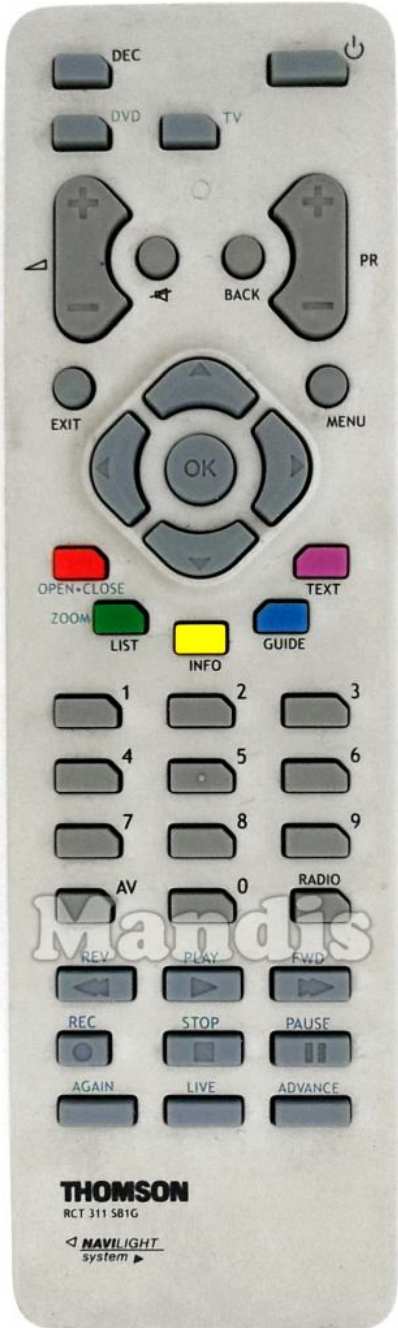



 
 


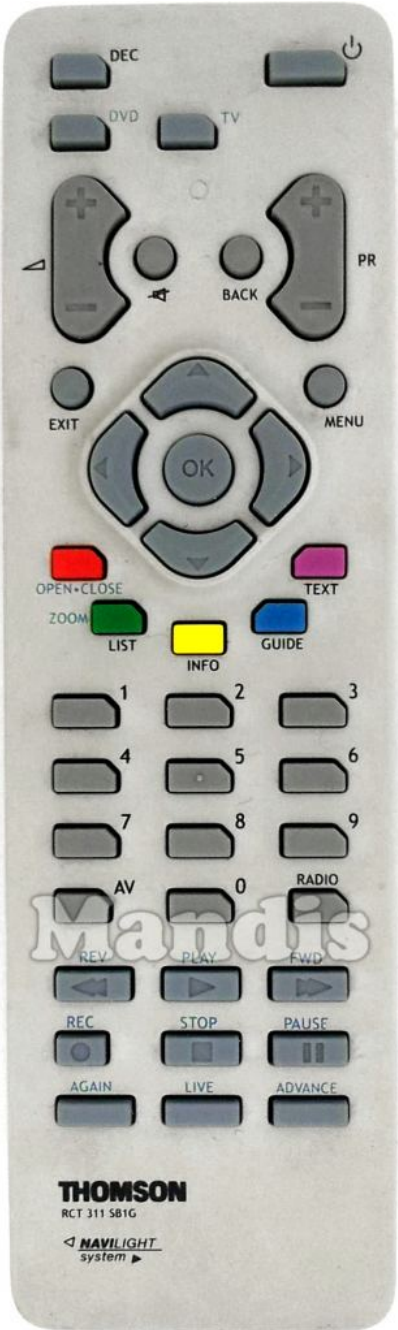




 

 

 










Original	Replacement	Original	Replacement
9	9		
0	0		
Red/Open/Close	Red / Netflix / Search		
Green/Zoom/Lis	Green / APP / Repeat		
Yellow/Info	Yellow / YouTube / Repeat		
Blue/Guide	Blue / Prime Video / Random		
Radio	Shift + TV/Radio / Program		
Again	Shift + Back / Return		
DVD	Shift + 2		






Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 TV	 TV/Radio /
 Dec	 D.Menu / Top
 Violet/Text	 Text / Goto
 AV	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 Live	 Smart / List
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Advance	 Display / Media
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8



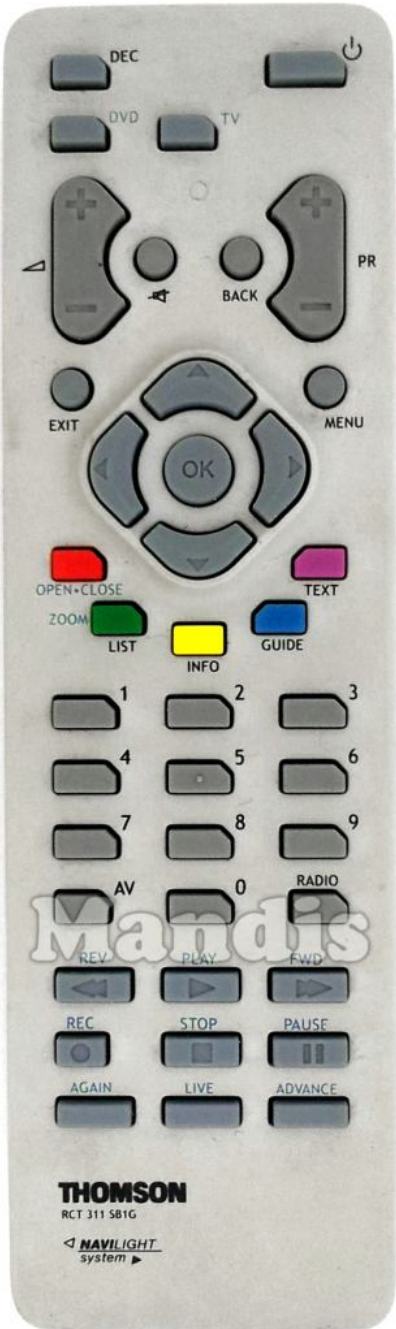

	Original	Replacement		Original	Replacement
	9	9			
	0	0			
Red/Open/Close	Red / Open / Close	Red / Netflix / Search			
Green/Zoom/Lis	Green / Zoom / Lis	Green / APP / Repeat			
Yellow/Info	Yellow / Info	Yellow / YouTube / Repeat			
Blue/Guide	Blue / Guide	Blue / Prime Video / Random			
Radio	Radio	Shift + TV / Radio / Program			
Again	Again	Shift + Back / Return			
DVD	DVD	Shift + 2			

Original	Replacement

