



| Original     | Replacement            | Original      | Replacement           |
|--------------|------------------------|---------------|-----------------------|
| Power        | Power                  | 4             | 4                     |
| VIDEO        | Red / Netflix / Search | 5             | 5                     |
| Sleep        | Sleep / Timer          | 6             | 6                     |
| Tuner Band   | TV/Radio /             | 7             | 7                     |
| P.Call Down  | Shift + Down           | 8             | 8                     |
| P.Call Up    | Shift + Up             | 9             | 9                     |
| Changer CD 1 | Shift + 1              | 0             | 0                     |
| Changer CD 2 | Shift + 2              | +10           | Guide / EPG / -/-     |
| Changer CD 3 | Shift + 7              | I<< / Preset- | I<< / Preset-         |
| Changer CD 4 | Shift + 4              | >>I / Preset+ | >>I / Preset+         |
| Changer CD 5 | Shift + 8              | Stop          | Stop / Hold           |
| Changer CD 6 | Shift + 9              | Play/Pause    | Play / Slow           |
| P            | OK                     | Repeat        | Green / APP / Repeat  |
| P.Open/Close | Eject / Surround       | Clear         | Exit / Cancel / Clear |
| 1            | 1                      | Check         | Shift + OK            |
| 2            | 2                      | Edit          | Text / Goto           |
| 3            | 3                      | P.Mode        | Picture / Format      |









 




| Original      | Replacement               |
|---------------|---------------------------|
| AI Auto Focus | Info / Angle              |
| Up            | Up                        |
| Presence      | Setup / OPT /             |
| AI/Loudness   | Audio / Lang I/II         |
| Left          | Left                      |
| EQ.Effect     | D.Menu / Top              |
| Right         | Right                     |
| Off           | Shift + Mute / Dimmer     |
| M.Call        | Back / Return             |
| Down          | Down                      |
| Display       | Display / Media           |
| S.W.Power     | Shift + Power             |
| S.W.Effect    | Shift + D.Menu / Top Menu |
| S.W.Vol-      | Shift + Vol-              |
| S.W.Vol+      | Shift + Vol+              |
| Mute          | Mute / Dimmer             |
| LD/AUX        | AV / Input / RDS          |

| Original         | Replacement |
|------------------|-------------|
| Tape             | Shift + 5   |
| Tuner            | Shift + 6   |
| CD               | Shift + 3   |
| Volume Control - | Vol-        |
| Volume Control + | Vol+        |





| Original       | Replacement   | Original              | Replacement |
|----------------|---|-----------------------|-------------|
| Power ON/Off   |    | Power                 |             |
| Mute           |    | Mute / Dimmer         |             |
| CD Play        |    | Play / Slow           |             |
| CD Pause       |    | Pause / Step / Freeze |             |
| Stop           |    | Stop / Hold           |             |
| CD Rewind      |    | << / Tune-            |             |
| CD F.FWD       |    | >> / Tune+            |             |
| Prev./Prog-    |    | << / Preset-          |             |
| Next/Prog+     |    | >>  / Preset+         |             |
| Tape 2 Pre./eq |    | Subtitle / EQ         |             |
| Fm Mode/Disc   |   | Eject / Surround      |             |
| Edit           |  | Zoom / Size           |             |
| Sleep          |  | Sleep / Timer         |             |
| Program        |  | TV/Radio /            |             |
| Every Pop      |  | D.Menu / Top          |             |
| Funct./Direct  |  | Setup / OPT /         |             |
| Woofers/Speed  |  | Text / Goto           |             |

| Original         | Replacement   | Original              | Replacement |
|------------------|---|-----------------------|-------------|
| Input/Source     |    | AV / Input / RDS      |             |
| Mode             |    | Menu / Home           |             |
| Tape 1 Preset    |    | Up                    |             |
| CD/Theater       |    | Info / Angle          |             |
| Tape 1 Hall/Ats  |    | Left                  |             |
| Center           |    | OK                    |             |
| Tape 2 REC./Jazz |    | Right                 |             |
| Clear            |    | Exit / Cancel / Clear |             |
| Preset Pause     |    | Down                  |             |
| Volume+          |    | Vol+                  |             |
| Band             |   | Smart / List          |             |
| Vol Rs+/S.Mode   |  | CH+ / Page+           |             |
| Volume-          |  | Vol-                  |             |
| Display          |  | Display / Media       |             |
| Vol Rs-/Effect   |  | CH- / Page-           |             |
| Pr 1             |  | 1                     |             |
| Pr 2             |  | 2                     |             |





| Original      | Replacement                 | Original | Replacement |
|---------------|-----------------------------|----------|-------------|
| Pr 3          | 3                           |          |             |
| Pr 4          | 4                           |          |             |
| Pr 5          | 5                           |          |             |
| Pr 6          | 6                           |          |             |
| Pr 7          | 7                           |          |             |
| Pr 8          | 8                           |          |             |
| Pr 9          | 9                           |          |             |
| +10/Next Sv+V | Guide / EPG / -/--          |          |             |
| Pr 0/10       | 0                           |          |             |
| Repeat        | Green / APP / Repeat        |          |             |
| CD Random     | Blue / Prime Video / Random |          |             |
| Tape 1 Play   | Shift + Play /              |          |             |
| Tape 1 Stop   | Shift + Stop /              |          |             |
| Tape 1 Rec    | Shift + Rec / Rec Mode      |          |             |
| Tape 1 Rew    | Shift + << /                |          |             |
| Tape 1 F.FWD  | Shift + >> /                |          |             |

