
















 


 



 




 









 











 



 
















Original	Replacement	Original	Replacement
 Power	 Power	 4	 4
 VIDEO	 Red / Netflix / Search	 5	 5
 Sleep	 Sleep / Timer	 6	 6
 Tuner Band	 TV/Radio /	 7	 7
 P.Call Down	 Shift + Down	 8	 8
 P.Call Up	 Shift + Up	 9	 9
 Changer CD 1	 Shift + 1	 0	 0
 Changer CD 2	 Shift + 2	 +10	 Guide / EPG / -/-
 Changer CD 3	 Shift + 7	 I<<	 I<< / Preset-
 Changer CD 4	 Shift + 4	 >>I	 >>I / Preset+
 Changer CD 5	 Shift + 8	 Stop	 Stop / Hold
 Changer CD 6	 Shift + 9	 Play/Pause	 Play / Slow
 P	 OK	 Repeat	 Green / APP / Repeat
 P.Open/Close	 Eject / Surround	 Clear	 Exit / Cancel / Clear
 1	 1	 Check	 Shift + OK
 2	 2	 Edit	 Text / Goto
 3	 3	 P.Mode	 Picture / Format



[illegible]



Original	Replacement
Power ON/Off	 Power
Mute	 Mute / Dimmer
CD Play	 Play / Slow
CD Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
CD Rewind	 << / Tune-
CD F.FWD	 >> / Tune+
Prev./Prog-	 I<< / Preset-
Next/Prog+	 >>I / Preset+
Tape 2 Pre./eq	 Subtitle / EQ
Fm Mode/Disc	 Eject / Surround
Edit	 Zoom / Size
Sleep	 Sleep / Timer
Program	 TV/Radio /
Every Pop	 D.Menu / Top
Funct./Direct	 Setup / OPT /
Woofers/Speed	 Text / Goto

Original	Replacement
Input/Source	 AV / Input / RDS
Mode	 Menu / Home
Tape 1 Preset	 Up
CD/Theater	 Info / Angle
Tape 1 Hall/Ats	 Left
Center	 OK
Tape 2 REC./Jazz	 Right
Clear	 Exit / Cancel / Clear
Preset Pause	 Down
Volume+	 Vol+
Band	 Smart / List
Vol Rs+/S.Mode	 CH+ / Page+
Volume-	 Vol-
Display	 Display / Media
Vol Rs-/Effect	 CH- / Page-
Pr 1	 1
Pr 2	 2



