

















Original	Replacement	Original	Replacement
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 PR List	 Smart / List	 Aspect	 Shift + Picture / Format
 0	 0	 Sleep	 Sleep / Timer
 Recall	 Back / Return	 Info/Display	 Info / Angle
 Vol+	 Vol+	 I/II/Nicam	 Shift + Audio / Lang I/II
 P.Mode	 Picture / Format	 DVD/USB	 Shift + 2
 S.Mode	 Sound / Title	 Text	 Text / Goto





Original	Replacement
 Subtitle	 Subtitle / EQ
 Size	 Zoom / Size
 Play/Pause/Index	 Play / Slow
 Stop/Reveal	 Stop / Hold
 Step/Subpage	 Pause / Step / Freeze
 Open/Close/Hol	 Eject / Surround
 I<</FAV	 I<< / Preset-
 >>ITv/Radio	 Shift + >> /
 <</Audio	 << / Tune-
 >>/EPG	 >> / Tune+
 Red/Prog	 Red / Netflix / Search
 Green/Zoom	 Green / APP / Repeat
 Yellow/Title	 Yellow / YouTube / Repeat
 Blue/DVD-Setup	 Blue / Prime Video / Random
 DVD-Menu	 D.Menu / Top
 Repeat	 Shift + Green / APP / Repeat
 A-B	 Shift + Yellow / YouTube / Repeat

Original	Replacement
 DVD-Lang	 Audio / Lang I/II

