








 

 

 

 

 





 


 



 



 
 

 



 


 
 

 






 
 

 
 


 





 










Original	Replacement	Original	Replacement
 Power	 Power	 P-	 Ch -
 TV / DTV	 Smart	 AV	 AV
 Guide	 Guide	 Mute	 Mute
 Up	 Up	 Vol+	 Vol +
 Left	 Left	 Vol-	 Vol -
 OK	 Ok	 1	 1
 Right	 Right	 2	 2
 Down	 Down	 3	 3
 Menu	 Menu	 4	 4
 Back	 Back	 5	 5
 Zoom	 Eject	 6	 6
 O↔O	 Shift + Dual	 7	 7
 Red	 Red	 8	 8
 Green	 Green	 9	 9
 Yellow	 Yellow	 0	 0
 Blue	 Blue	 (i)	 Info
 P+	 Ch +	 [≡]	 Text





Original	Replacement	Original	Replacement
 [=i]	SHIFT + DISPLAY INFO Shift + Info		
 [↑]	ECO 3D 3D		
 [?]	APP MEDIA Media		
 [□]	Stop		
TVRADIO TV / Radio	SEARCH TV/R TV/R		
 /	SOUND DUAL Dual		
 [⊕]	SHIFT + AD SUBT Shift + Subt		
 [...]	AD SUBT Subt		

