




 






 
 





 















 

 

 

 
 
 

 

 

 

 

 
 
 

 

 

 



 






Original	Replacement	Original	Replacement
 Power	 Power	 Top Menu	 D. Menu
 Sleep	 Sleep	 Menu	 Menu
 Clock / Timer	 AV	 Up	 Up
 Cancel	 Exit	 Left	 Left
 1	 1	 Enter	 Ok
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Setup	 Options
 5	 5	 Display	 Info
 6	 6	 Angle	 Format
 7	 7	 Return	 Back
 8	 8	 DVD/CD	 Red
 9	 9	 TAPE	 Green
 0	 0	 EXT	 Yellow
 >≧10 / -/-	 Guide	 TUNER	 Blue
 Subtitle	 Subt	 Stop	 Stop
 Audio	 Dual	 Pause / Rev. Play	 Pause





Original	Replacement	Original	Replacement
 Play	 Play		
 Auto / Mono	 3D		
 I<< Skip	 I<<		
 Skip >>I	 >>I		
 << Slow/Search	 <<		
 Slow/Search >>	 >>		
 Muting	 Mute		
 Repeat	 Text		
 A-B Repeat	 Shift + Text		
 Play Mode	 Rec		
 Volume-	 Vol -		
 Volume+	 Vol +		
 Balance L	 Ch -		
 Balance L	 Shift + Left		
 Balance R	 Ch +		
 Balance R	 Shift + Right		

