






 
 
 






 



 


 



 



 

 






 


 




 
 



 







 










Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 Mute	 Mute	 Subtitle	 Subt
 TV / Radio	 TV/R	 Return	 Back
 P-Mode	 Format	 Fav	 Pre Ch
 S-Mode	 Dual	 Smart Hub	 Smart
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit
 7	 7	 EPG	 Guide
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 Info	 Info
 Menu	 Menu	 CH. List	 3D
 Index	 Media	 CH+	 Ch +





Original		Replacement		Original	Replacement
	CH-		Ch -		
	Play / Pause		Play		
	Play / Pause		Pause		
	<<		<<		
	>>		>>		
	Rec		Rec		
	Stop		Stop		
	I<<		I<<		
	>>I		>>I		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		

