



Original	Replacement
Power Receiver	Power
Power Source	Shift + Power
HDMI 1	Shift + 1
HDMI 2	Shift + 2
HDMI 3	Shift + 3
HDMI 4	Shift + 4
HDMI 5	Shift + 5
HDMI 6	Shift + 6
HDMI 7	Shift + 7
V-AUX	Shift + 8
AV 1	Shift + 9
AV 2	Shift + Guide
AV 3	Shift + 0
AV 4	Shift + Pre Ch
AV 5	Shift + Smart
AV 6	Shift + Media
Audio	Dual

Original	Replacement
Tuner	TV/R
Bluetooth	Red
USB	Green
Net	Yellow
Phono	Blue
Party	Smart
HDMI Out	Media
BD/DVD	Text
TV	Subt
Net	AV
Radio	D. Menu
Program Up	Ch +
Program Down	Ch -
Volume+	Vol +
Volume-	Vol -
Mute	Mute
Top Menu	Shift + Menu





Original	Replacement
 Pop-Up Menu	 Menu
 On Screen	 Eject
 Option	 Options
 Return	 Back
 Display	 Shift + Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Mode	 Format
 Stop	 Stop
 Pause	 Pause
 Play/Band	 Play
 << Tuning	 <<
 Tuning >>	 >>
 I<< Preset	 I<<

Original	Replacement
 Preset >>I	 >>I
 Movie	 Shift + Subt
 Music	 3D
 Sur Decode	 Shift + Text
 Straight	 Shift + AV
 Info	 Info
 Sleep	 Sleep
 Enhancer	 List
 Pure Direct	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8






	Original	Replacement		Original	Replacement
	9				
	0				
	+10/Memory				
	ENT				







 
 
 

 
 


 
 







 

 


 
 
 


 
Original	Replacement
 Power Receiver	 Power
 Power Source	 Shift + Power
 HDMI 1	 Shift + 1
 HDMI 2	 Shift + 2
 HDMI 3	 Shift + 3
 HDMI 4	 Shift + 4
 HDMI 5	 Shift + 5
 HDMI 6	 Shift + 6
 HDMI 7	 Shift + 7
 V-AUX	 Shift + 8
 AV 1	 Shift + 9
 AV 2	 Shift + Guide
 AV 3	 Shift + 0
 AV 4	 Shift + Pre Ch
 AV 5	 Shift + Smart
 AV 6	 Shift + Media
 Audio	 Dual

Original	Replacement
 Tuner	 TV/R
 Bluetooth	 Red
 USB	 Green
 Net	 Yellow
 Phono	 Blue
 Party	 Smart
 HDMI Out	 Media
 BD/DVD	 Text
 TV	 Subt
 Net	 AV
 Radio	 D. Menu
 Program Up	 Ch +
 Program Down	 Ch -
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Top Menu	 Shift + Menu





Original	Replacement
 Pop-Up Menu	 Menu
 On Screen	 3D
 Option	 Options
 Return	 Back
 Display	 Shift + Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Mode	 Format
 Stop	 Stop
 Pause	 Pause
 Play/Band	 Play
 << Tuning	 <<
 Tuning >>	 >>
 I<< Preset	 I<<

Original	Replacement
 Preset >>I	 >>I
 Info	 Info
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/Memory	 Guide
 ENT	 Pre Ch

