
 


 



 
 

 



 


 





 



 
 


 





Original	Replacement	Original	Replacement
	Power STB		Power
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	l<		l<<
	>l		>>l
	Stop		Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Video		Format
	Menu		Menu
	i		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Back		Back
	Guide		Guide
	X		Exit
	Vol+		Vol +
	Vol-		Vol -
	↑		Shift + Up
	↓		Shift + Down
	CH+		Ch +
	CH-		Ch -
	Mute		Mute
	P < P		Pre Ch
	1		1
	2		2






 


 


 

 

 
 
 

 








 



 





Original	Replacement	Original	Replacement
PWR On/Off	 Power	Audio	 Dual
Epg	 Guide	CH/Page-	 Ch -
Subt.List	 Subt	1. ?	 1
Opt?	 Options	2abc	 2
App	 Media	3def	 3
Sleep Timer	 Sleep	4ghi	 4
TV	 TV/R	5jkl	 5
Text	 Text	6mno	 6
Zoom	 Eject	7pqrm	 7
Menu	 Menu	8tuv	 8
Menu Up	 Up	9wxyz	 9
Menu Left	 Left	0/10	 0
OK Enter	 Ok	FAV Pref.	 Pre Ch
Menu Right	 Right	Red	 Red
Menu Down	 Down	Green	 Green
Back	 Back	Yellow	 Yellow
CH/Page+	 Ch +	Blue	 Blue





Original	Replacement	Original	Replacement
PWR On/Off	 Power	CH/Page+	 Ch +
Mute	 Mute	Volume-	 Vol -
Opt?	 Options	Audio	 Dual
App	 Media	CH/Page-	 Ch -
Subt.List	 Subt	1. ?	 1
Info	 Info	2abc	 2
Video	 D. Menu	3def	 3
Zoom	 Eject	4ghi	 4
Menu	 Menu	5jkl	 5
Menu Up	 Up	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 Ok	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit	Guide Pilote	 Guide
Menu Down	 Down	0/10	 0
Back	 Back	FAV Pref.	 Pre Ch
Volume+	 Vol +	Red	 Red



