


 







 

 





 

 



 








 


Original	Replacement
 VHS/DVD Power	 Power
 Direct TV Rec	 Subt
 VHS/DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel / Reset	 Exit
 Input Select	 Guide
 CH+ / Tracking/V-Lock+	 Ch +
 CH- / Tracking/V-Lock-	 Ch -

 
Original	Replacement
 Create Chapter	 TV/R
 I<< Skip	 I<<
 Skip >>I	 >>I
 REW / << Slow/Search	 <<
 FF / Slow/Search	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Direct Navigator / Top Menu	 D. Menu
 Functions	 List
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Sub Menu	 Menu
 Return	 Back



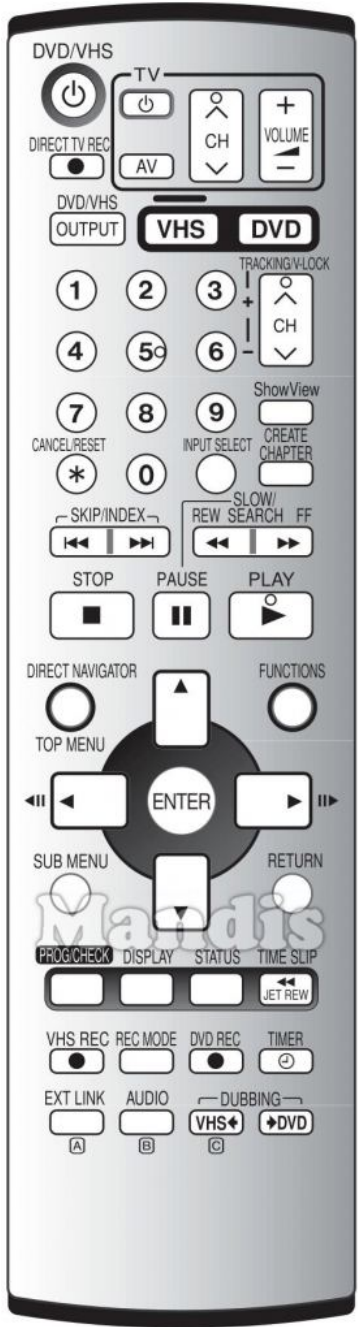


Original		Replacement		Original		Replacement	
	Prog / Check		Sleep				
	Display		Info				
	Status		Media				
	Time Slip		Vol +				
	Timer		AV				
	Ext Link		3D				
	Audio / B		Dual				
	Dubbing		Blue				

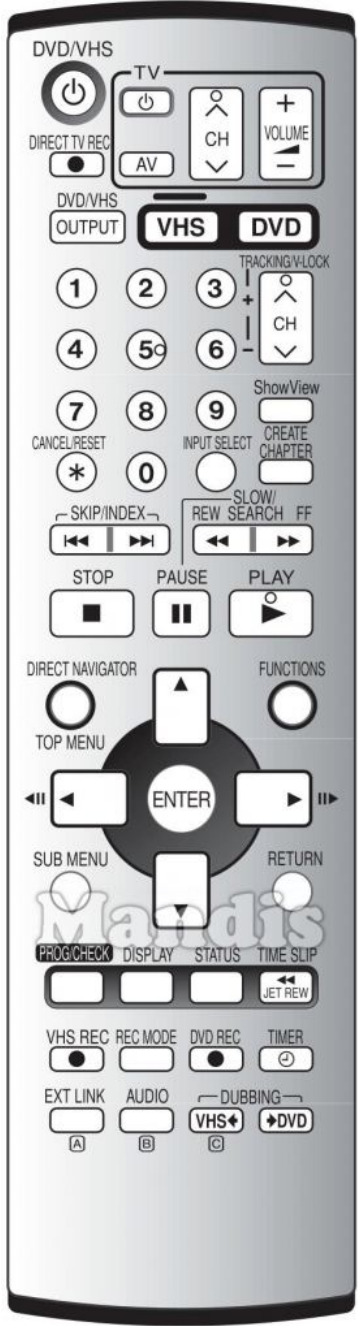


 



 
 
 



 

 

 

 


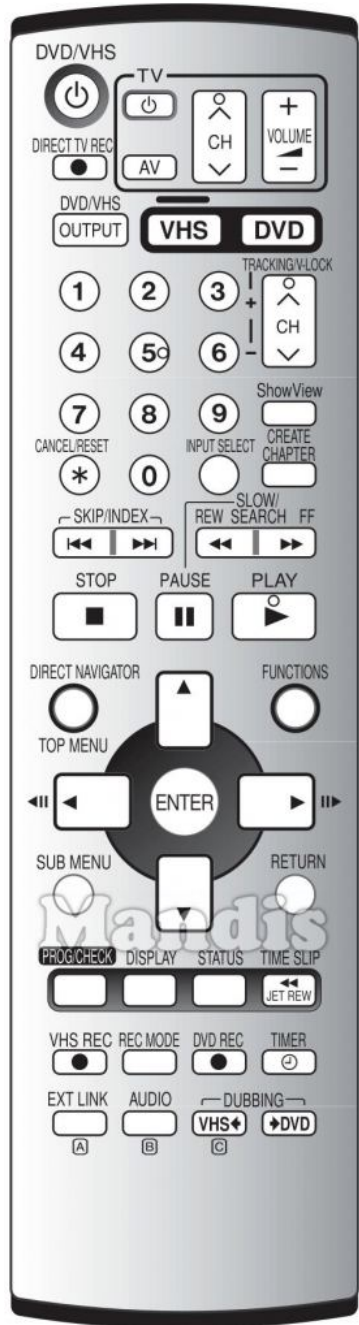
 
 
 

 









 








 

 



 







 
 







	Original	Replacement		Original	Replacement
	Power		Power		
	AV		AV		
	Volume+		Vol +		
	Volume-		Vol -		
	CH+		Ch +		
	CH-		Ch -		





Original	Replacement
 VHS/DVD Power	 Power
 Direct TV Rec	 Subt
 VHS/DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel / Reset	 Exit
 Input Select	 AV
 CH+ / Tracking/V-Lock+	 Ch +
 CH- / Tracking/V-Lock-	 Ch -

Original	Replacement
 ShowView	 Media
 I<< Index	 I<<
 Index >>I	 >>I
 REW	 <<
 FF	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return	 Back
 Prog/Check	 Sleep
 Display	 Info
 Jet Rew	 Shift + <<



