










 











 





















 




Original	Replacement
	 Eject / Surround
	 Power
	 Display / Media
	 Picture / Format
	 Audio / Lang I/II
	 Smart / List
	 Exit / Cancel / Clear
	 TV/Radio /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Original	Replacement
	 Guide / EPG / -/--
	 0
	 AV / Input / RDS
	 Vol+
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 Rec / Rec Mode
	 Shift + Slow Play /
	 Shift + Tune+ >> /
	 D.Menu / Top
	 I<< / Preset-
	 >>I / Preset+
	 Menu / Home
	 Up
	 Pause / Step / Freeze
	 Sleep / Timer



 

 
 




 











	Original	Replacement		Original	Replacement
	Left	 Left			
	<<	 << / Tune-			
	OK	 OK			
	Play	 Play / Slow			
	Right	 Right			
	>>	 >> / Tune+			
	Down	 Down			
	Stop	 Stop / Hold			





Original	Replacement	Original	Replacement
 Power	 Power	 Prog+	 CH+ / Page+
 Display	 Display / Media	 Vol-	 Vol-
 Format	 Picture / Format	 Prog-	 CH- / Page-
 Audio Monitor	 Audio / Lang I/II		
 TV / Video	 TV/Radio /		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 -/--	 Guide / EPG / -/--		
 0	 0		
 Vol+	 Vol+		

Original	Replacement	Original	Replacement
 Prog+	 CH+ / Page+	 Vol-	 Vol-
 Vol-	 CH- / Page-		
 Prog-			

