























 







 

















 



 

 






 








Original		Replacement		Original		Replacement	
	Power		Power		→ ←		Smart / List
	Mute		Mute / Dimmer		P+		CH+ / Page+
	1		1		P-		CH- / Page-
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		Vol+		Vol+
	7		7		Vol-		Vol-
	8		8		Info		Info / Angle
	9		9		Timer		Sleep / Timer
	0		0		Syst		Setup / OPT /
	AV		AV / Input / RDS		Store		Zoom / Size
	-/--		Guide / EPG / -/--		Menu		Menu / Home
	Tv		TV/Radio /		P100		Fav / Marker / PC
	TX		Text / Goto		Red		Red / Netflix / Search
	Sel		OK		Green		Green / APP / Repeat





Original	Replacement
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Clock/Sub Subtitle / EQ
	Update Back / Return
	Mix Picture / Format
	Double D.Menu / Top
	Reveal Display / Media
	Hold Stop / Hold
	Stereo On/Off Audio / Lang I/II
	A-B Mono Sound / Title
	PS Exit / Cancel / Clear

Original	Replacement

