



Original	Replacement	Original	Replacement
PWR	Power	TV/Rad	TV/Radio /
TV/STB	Display / Media	1	1
2	2	3	3
4	4	5	5
6	6	7	7
8	8	9	9
Back	Back / Return	0	0
Mute	Mute / Dimmer	Red	Red / Netflix / Search
OPT	Setup / OPT /		

Original	Replacement	Original	Replacement
Green	Green / APP / Repeat	A/V+	AV / Input / RDS
Yellow / FAV	Yellow / YouTube / Repeat	FAV	Fav / Marker / PC
Blue / A-Z	Blue / Prime Video / Random	Menu	Menu / Home
Blue / A-Z	Shift + Blue / Prime	EPG	Guide / EPG / -/-
Info	Info / Angle	Up	Up
Left	Left	OK	OK
Right	Right	Down	Down
Vol+	Vol+	Exit	Exit / Cancel / Clear
PR/CH+	CH+ / Page+		




**Original**
**Replacement**




















	Vol-		Vol-
	PR/CH-		CH- / Page-
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	l>/Slow	 + 	Shift + Play /
	[:=]/List		Smart / List
	A-B	 + 	Shift + Yellow / YouTube /
	Mark	 + 	Shift + Fav / Marker / PC
	Jump		Text / Goto
	PIP	 + 	Shift + OK
	Swap	 + 	Shift + Left
	Move	 + 	Shift + Right
	Sleep		Sleep / Timer









 

 







 

**Original**
**Replacement**


























Original	Replacement	
PWR On/Off		Power
East		D.Menu / Top
TV	 +  Shift + 1	
Dec/Pause		Pause / Step / Freeze
Alt/16:9		Picture / Format
H/V Play		Play / Slow
Opt?		Setup / OPT /
FAV Pref.		Fav / Marker / PC
4ghi		4
Guide Pilote	 +  Shift + Guide / EPG / -/-	
9wxyz		9
8tuv		8
7pqrm		7
6mno		6
3def		3
5jkl		5
2abc		2

Original	Replacement	
1. ?		1
Yellow	 Yellow / YouTube / Repeat	
LNB F.Forward		>> / Tune+
Lang./Rewind		<< / Tune-
TV/SAT		AV / Input / RDS
West		>>I / Preset+
Dev		I<<< / Preset-
0/10		0
Video	 +  Shift + 4	
Red	 Red / Netflix / Search	
Green	 Green / APP / Repeat	
Blue	 Blue / Prime Video / Random	
Freeze	 +  Shift + Pause / Step /	
Menu Up		Up
Mute		Mute / Dimmer
Epg		Guide / EPG / -/-
App	 +  Shift + Green / APP / Repeat	





Original	Replacement	
Info		Info / Angle
Subt.List		Subtitle / EQ
Sleep Timer		Sleep / Timer
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
Audio		Audio / Lang I/II

Original	Replacement	
CH/Page-		CH- / Page-

