



Original	Replacement
Standby / On	Power
Title	Sound / Title
Menu	Menu / Home
Open / Close	Eject / Surround
OSD / Setup	Setup / OPT /
1	1
2	2
3	3
Slow Fwd	Shift + Play /
4	4
5	5
6	6
Prev / Rev	<< / Tune-
Prev / Rev	<< / Preset-
7	7
8	8
9	9

Original	Replacement
Next / Fwd	>> / Tune+
Next / Fwd	>> / Preset+
0	0
Clear	Exit / Cancel / Clear
Search	Red / Netflix / Search
Pause / Step	Pause / Step / Freeze
Up	Up
Play	Play / Slow
Left	Left
Enter	OK
Right	Right
Stop	Stop / Hold
Down	Down
Return	Back / Return
Play Mode	Display / Media
A-B	Yellow / YouTube / Repeat
Memory	Fav / Marker / PC





Original		Replacement		Original		Replacement	
	Timer		Sleep / Timer				
	Equalizer		Shift + Subtitle / EQ				
	Vol / CH		Smart / List				
	empty left		CH- / Page-				
	empty right		CH+ / Page+				
	Zoom		Zoom / Size				
	Angle		Info / Angle				
	Subtitle		Subtitle / EQ				
	Audio		Audio / Lang I/II				

