

















 











Original	Replacement
	 Power
	 D.Menu / Top
	 Mute / Dimmer
	 Shift + 0
	 Display / Media
	 AV / Input / RDS
	 Zoom / Size
	 Sleep / Timer
	 1
	 2
	 3
	 Fav / Marker / PC
	 4
	 5
	 6
	 Pause / Step / Freeze
	 7

Original	Replacement
	 8
	 9
	 Shift + CH+ /
	 TV/Radio /
	 0
	 Back / Return
	 Shift + CH- /
	 CH+ / Page+
	 Up
	 Left
	 Vol-
	 Smart / List
	 OK
	 Right
	 Vol+
	 CH- / Page-
	 Down





Original		Replacement		Original		Replacement	
	Menu		Menu / Home		< Slow		I << / Preset-
	Exit		Exit / Cancel / Clear		> Slow		>> I / Preset+
	Info		Info / Angle				
	EPG		Guide / EPG / --				
	Red / Find		Red / Netflix / Search				
	Green / V-Format		Picture / Format				
	Green / V-Format		Green / APP / Repeat				
	Yellow / TXT		Text / Goto				
	Yellow / TXT		Yellow / YouTube / Repeat				
	Blue / Audio		Audio / Lang I/II				
	Blue / Audio		Blue / Prime Video / Random				
	Record		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				
	Shift		Setup / OPT /				
	<< Fast		<< / Tune-				
	>> Fast		>> / Tune+				

