

 





 
 
 
 

 

 

 

 

 
 




 



 
 






 



 
 


 
 






 



 


 
 



 




Original	Replacement	Original	Replacement
 Power	 Power	 >> / >>	 >>
 Open / Close	 Eject	 >> / >>	 >>
 DVD	 Media	 Program	 Sleep
 Display	 Info	 Clear	 Exit
 Disc Menu	 D. Menu	 1	 1
 Up	 Up	 2	 2
 Down	 Down	 3	 3
 Left	 Left	 4	 4
 Enter	 Ok	 5	 5
 Right	 Right	 6	 6
 Setup	 Options	 7	 7
 Top Menu	 Menu	 8	 8
 Pause / Step	 Pause	 9	 9
 Stop	 Stop	 0	 0
 << /  <<	 <<	 Audio	 Dual
 << /  <<	  <<	 Subtitle	 Subt
 Play	 Play	 Mark	 Pre Ch









Original	Replacement
Power	Power
Eject	Eject
TV / VCR	TV/R
VCR	Media
Output Select	Shift + AV
CLK / CNT	Options
Up / CH+ / Track+	Up
Down / CH- /	Down
Left	Left
OK	Ok
Right	Right
i	Info
AV	AV
Pause / Step	Pause
Stop	Stop
Rec / OTR	Rec
<<	<<

Original	Replacement
Play	Play
>>	>>
Clear	Exit
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Audio	Dual
Search	Shift + TV/R
Clock	Yellow
Repeat	Text



