







 

 















Original	Replacement
	 Power
	 Sleep / Timer
	 Mute / Dimmer
	 Setup / OPT /
	 Audio / Lang I/II
	 AV / Input / RDS
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 Smart / List
	 CH+ / Page+
	 CH- / Page-
	 Up
	 Right
	 Vol+
	 Down

Original	Replacement
	 Left
	 Vol-

