
 
 




 

 
 


 



 

 


 
 


 

 


 




 

 

 







 

 






 
 




 
 







Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Media	Menu Off	 Exit
Reveal	 Smart	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 +  Shift + Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Game Coo	 Shift + Eject
9	 9	Disp	 3D
Guide -/-- 1.	 Guide	AV 2	 Shift + AV
0/10	 0	Bright+ Mode	 Shift + Menu
2.Fav P/C 2.	 Pre Ch	Tune-	 Shift + Left
Red	 Red	Search	 Shift + TV/R
Green	 Green	Aft/Caf	 Shift + Ok
Yellow	 Yellow	Tune+	 Shift + Right
Blue	 Blue	Bright- Sys	 Shift + Exit
Rotate Text	 Shift + Mute	Contrast+	 Shift + Ch +
Tone-	 <<	Store	 Options
On/Tim	 Play	Color- S.Std	 Dual
Tone+	 >>	Contrast-	 Shift + Ch -
Off/Tim	 Pause	4.# 16:9	 Shift + Format
Mix Scan	 List	3.*	 Shift + Guide
Store Text	 Shift + Text	Surround	 Shift + Red
Color+ P.Std	 Format	Nicam/Mono	 Shift + Green



Original	Replacement		Original	Replacement
Level L	SHIFT + C	Shift + Yellow		
Level R/Woofers	SHIFT + D	Shift + Blue		

