




 










 



 



 

 

 

 








 






 





























 



Original	Replacement
 Power	 Power
 Power Tv	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Txt	 Text / Goto
 0	 0
 [<>]/4:3/16:9	 Picture / Format
 TV	 Subtitle / EQ
 Radio	 TV/Radio /
 Up	 Up

Original	Replacement
 Help	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Music	 Audio / Lang I/II
 Down	 Down
 WWW	 Display / Media
 Video	 Shift + 4
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol+ Tv	 Shift + Vol+
 M	 Menu / Home
 Prog+	 CH+ / Page+
 Vol-	 Vol-





Original	Replacement	Original	Replacement
	Vol- Tv  Shift + Vol-		
	Back  Back / Return		
	Prog-  CH- / Page-		
	Mute  Mute / Dimmer		
	Mute Tv  Shift + Mute / Dimmer		
	Play  Play / Slow		
	Pause  Pause / Step / Freeze		
	Stop  Stop / Hold		
	Buy  Fav / Marker / PC		
	I<<  I<< / Preset-		
	<<  << / Tune-		
	>>  >> / Tune+		
	>>I  >>I / Preset+		

