











 


 




 
 

 


Original	Replacement
Power On	Power
Power Off	Shift + Power
Zone Device On	Smart
Zone Device Off	Shift + Smart
Net/USB	Shift + 1
iPod	Shift + 2
DVD	Shift + 3
BD	Shift + 4
Tuner/DTU	Shift + 5
Dock	Shift + 6
SAT TU	Shift + 7
SAT/CBL	Shift + 8
Game	Shift + 9
V.AUX	Shift + Guide
Phono	Shift + 0
CD	Shift + Pre Ch
DVR	Blue

Original	Replacement
TV	Shift + Media
Monitor Select	Media
Quick Select 1	Red
Quick Select 2 (SAT/CBL)	Green
Quick Select 3 (Dock)	Yellow
CH+	Ch +
CH-	Ch -
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Source Select	AV
Menu	Menu
CH Level/Top	Info
Search/Setup	Options
Return	Back
Up	Up
Down	Down




 
 










 
 

 

 




Original	Replacement	Original	Replacement
	Right		Right
	Left		Left
	Enter		Ok
	<</Band		<<
	Play		Play
	>>/Mode		>>
	I<</Tuning-		I<<
	Pause		Pause
	Stop		Stop
	>>I/Tuning+		>>I
	Multeq		Subt
	Dyn EQ/Vol		Text
	A-DSX		TV/R
	Restorer		Exit
	Standard		Dual
	D/ST		Format
	Simulation		3D
	Pure		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10/Memory		Guide
	Shift/Link Menu		D. Menu
	Power Tv		Shift + TV/R
	Input Tv		Shift + AV
	Sleep		Sleep
	Party		List





Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 Shift + Smart
 Net/USB	 Shift + 1
 iPod	 Shift + 2
 DVD	 Shift + 3
 BD	 Shift + 4
 Tuner/DTU	 Shift + 5
 Dock	 Shift + 6
 SAT TU	 Shift + 7
 SAT/CBL	 Shift + 8
 Game	 Shift + 9
 V.AUX	 Shift + Guide
 Phono	 Shift + 0
 CD	 Pre Ch
 DVR	 Blue

Original	Replacement
 TV	 Media
 Quick Select 1	 Red
 Quick Select 2 (SAT/CBL)	 Green
 Quick Select 3 (Dock)	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Menu	 Menu
 CH Level/Top	 Info
 Search/Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left




 
 










 
 

 

 




Original		Replacement		Original		Replacement	
	Enter		Ok		0		0
	<</Band		<<		+10/Memory		Guide
	Play		Play		Shift/Link Menu		D. Menu
	>>/Mode		>>		Power Tv		TV/R
	I<</Tuning-		I<<		Input TV		AV
	Pause		Pause		Sleep		Sleep
	Stop		Stop		Party		List
	>>I/Tuning+		>>I				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				





 



 



 





 

 

 

 

 

 
 
 

 
 



 




 



 




Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 Shift + Smart
 Net/USB	 Shift + 1
 iPod	 Shift + 2
 DVD	 Shift + 3
 BD	 Shift + 4
 Tuner/DTU	 Shift + 5
 Dock	 Shift + 6
 SAT TU	 Shift + 7
 SAT/CBL	 Shift + 8
 Game	 Shift + 9
 V.AUX	 Shift + Guide
 Phono	 Shift + 0
 CD	 Pre Ch
 DVR	 Blue

Original	Replacement
 TV	 Media
 Quick Select 1	 Red
 Quick Select 2 (SAT/CBL)	 Green
 Quick Select 3 (Dock)	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Menu	 Menu
 CH Level/Top	 Info
 Search/Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left




 

 
 
 









 












 



Original	Replacement	Original	Replacement
	Enter		Ok
	<</Band		<<
	Play		Play
	>>/Mode		>>
	I<</Tuning-		I<<
	Pause		Pause
	Stop		Stop
	>>I/Tuning+		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10/Memory		Guide
	Shift/Link Menu		D. Menu
	Power Tv		TV/R
	Input Tv		AV
	Party		List
	Sleep		Sleep





 

 
 
 

 

 


 


 

 
 

 

 


 
 
 
 
 
 


Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 Shift + Smart
 NET/USB	 Shift + 1
 iPod	 Shift + 2
 DVD	 Shift + 3
 BD	 Shift + 4
 Tuner/DTU	 Shift + 5
 Dock	 Shift + 6
 SAT TU	 Shift + 7
 SAT/CBL	 Shift + 8
 Game	 Shift + 9
 V.AUX	 Shift + Guide
 Phono	 Shift + 0
 CD	 Pre Ch
 DVR	 Blue

Original	Replacement
 TV	 Media
 Quick Select 1	 Red
 Quick Select 2 (SAT/CBL)	 Green
 Quick Select 3 (Dock)	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Search/Setup	 Options
 <</Band	 <<
 Play	 Play
 >>/Mode	 >>
 I<</Tuning-	 I<<
 Pause	 Pause
 Stop	 Stop
 >>I/Tuning+	 >>I





	Original	Replacement	Original	Replacement
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	+10/Memory		GUIDE	Guide
	Power Tv		TV/R	TV/R
	Shift/Link Menu		D. Menu	D. Menu
	Input Tv		AV	AV
	Sleep		SLEEP	Sleep
	Party		LIST	List

