 







 


 

 
 

 













 









 

Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Audio	 Audio / Lang I/II
 TV / R	 TV/Radio /
 Sleep	 Sleep / Timer
 SUB	 Subtitle / EQ
 TXT	 Text / Goto
 YouTube	 Shift + Yellow / YouTube /
 Recall	 Back / Return
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 PGUP	 Shift + CH+ /
 0	 0
 FAV +	 Shift + Up
 PGDN	 Shift + CH- /
 SAT	 Shift + 0
 FAV -	 Shift + Down
 Up / CH +	 Up
 Up / CH +	 CH+ / Page+
 FAV	 Fav / Marker / PC
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK	 OK
 Right / Vol +	 Vol+
 Right / Vol +	 Right
 Menu	 Menu / Home
 Down / CH -	 Down





Original	Replacement
 Down / CH -	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Zoom	 Zoom / Size
 Edit	 D.Menu / Top
 Info	 Info / Angle
 USB	 Shift + 8
 MP3	 Display / Media
 JPEG	 Picture / Format
 PVR List	 Smart / List
 Goto	 Shift + Text /
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-

Original	Replacement
 >>	 >> / Tune+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

