



 

 










 


 

 


 

 

 

 






Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Last		Back
	TV / R		TV/R
	Exit		Exit
	Up / CH +		Ch +

Original	Replacement	Original	Replacement
	Up / CH +		Up
	Down / CH -		Ch -
	Down / CH -		Down
	Right / Vol +		Vol +
	Right / Vol +		Right
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Sub-T.		Subt
	Info		Info
	Text		Text
	Audio		Dual
	EPG		Guide
	Favor		Pre Ch
	Red / I<<		I<<
	Red / I<<		Red
	Green / <<		<<





Original	Replacement	Original	Replacement
 Green / <<	 Green		
 Yellow / >>	 >>		
 Yellow / >>	 Yellow		
 Blue / >>	 Blue		
 Blue / >>	 >>		
 USB	 Media		
 Rec / Goto	 Rec		
 Stop	 Stop		
 Play / Pause	 Pause		
 Play / Pause	 Play		

