



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	TV / R		TV/Radio /
	Menu		Menu / Home
	Sortie		Exit / Cancel / Clear
	Up		Up

Original	Replacement	Original	Replacement
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol +		Vol+
	Info		Info / Angle
	CH +		CH+ / Page+
	Vol -		Vol-
	Audio		Audio / Lang I/II
	CH -		CH- / Page-
	Red / RCL		Red / Netflix / Search
	Green / Pause		Shift + Green / APP /
	Green / Pause		Green / APP / Repeat
	Yellow / Sous		Yellow / YouTube / Repeat
	Yellow / Sous		Shift + Yellow / YouTube /
	Blue / Text		Shift + Blue / Prime
	Blue / Text		Blue / Prime Video / Random





Original		Replacement		Original		Replacement	
	FAV		Fav / Marker / PC				
	SAT		+	Shift + 0			
	V.F		Setup / OPT /				
	Pause		Pause / Step / Freeze				
	<		+	Shift + << /			
	>		+	Shift + >> /			
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Stop		Stop / Hold				

