



Original		Replacement		Original		Replacement	
	Power		Power		8		8
	TV/R		TV/R		9		9
	Mute		Mute		0		0
	Red / Audio		Red		SAT		Smart
	Red / Audio		Dual		Sleep		Sleep
	Green / Freeze		Green		Display		Shift + Info
	Yellow / Zoom		Yellow		Mode		Options
	Yellow / Zoom		Eject		Time		AV
	Blue / Info		Blue		Recall		Pre Ch
	Blue / Info		Info		Menu		Menu
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Vol+		Vol +





Original	Replacement
Vol-	Vol -
CH+	Ch +
CH-	Ch -
Back	Back
Page+	Shift + Ch +
Page-	Shift + Ch -
FAV	Shift + Pre Ch
SUB	Subt
F1	Shift + 1
F2	Shift + 2
EPG	Guide
TXT	Text
Find	Shift + TV/R
Help	Format
#	List
USB	Media
<<	<<

Original	Replacement
>>	>>
Play	Play
Stop	Stop
I<<	I<<
>>I	>>I
Pause	Pause
Rec	Rec

