





















 

 












 






 
 









Original	Replacement
 On	 Power
 Off	 Shift + Power
 Mute	 Mute / Dimmer
 AVR	 Shift + Smart / List
 DVD	 Shift + 2
 VID1	 Shift + 1
 HDMI1	 Shift + Guide / EPG / -/-
 AM/FM	 Shift + 6
 CD	 Shift + 3
 VID2	 Shift + 4
 HDMI2	 Shift + 0
 AUX	 Shift + 7
 Tape	 Shift + 5
 VID3	 Shift + 8
 HDMI3	 Shift + Fav / Marker / PC
 Sleep	 Sleep / Timer
 6CH	 Shift + 9

Original	Replacement
 Vol+	 Vol+
 Surr.	 Eject / Surround
 Test	 Text / Goto
 Vol-	 Vol-
 CH.	 Guide / EPG / -/-
 Up	 Up
 SPKR	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Digital	 Picture / Format
 Down	 Down
 Delay	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 4	 4





 

Original	Replacement
 5	 5
 6	 6
 7	 7
 8	 8
 Tun-M	 Smart / List
 9	 9
 0	 0
 Mem	 Info / Angle
 Tuning ▲	 >> / Tune+
 Direct	 Back / Return
 Clear	 Exit / Cancel / Clear
 Preset ▲	 >>I / Preset+
 Tuning ▼	 << / Tune-
 Tone	 Setup / OPT /
 RDS	 AV / Input / RDS
 Preset ▼	 I<< / Preset-
 Dolby Surr	 Red / Netflix / Search

Original	Replacement
 DTS Surr.	 Green / APP / Repeat
 DTS Neo 6	 Yellow / YouTube / Repeat
 Night	 Shift + Sleep / Timer
 Logic 7	 Shift + Blue / Prime / Prime
 Stereo	 Blue / Prime Video / Random
 DIM	 D.Menu / Top





Original	Replacement
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Disc Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 Status	 Display / Media
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Playlist	 Smart / List
 I<</Skip Down	 I<< / Preset-
 Skip Up/>>I	 >>I / Preset+
 << DVD	 << / Tune-
 > DVD	 Play / Slow
 >> DVD	 >> / Tune+
 Open / Close	 Eject / Surround
 Stop DVD	 Stop / Hold

Original	Replacement
 Pause DVD	 Pause / Step / Freeze

