
















 














 










Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 D.Menu / Top
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Replacement
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 MTS	 Info / Angle
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode












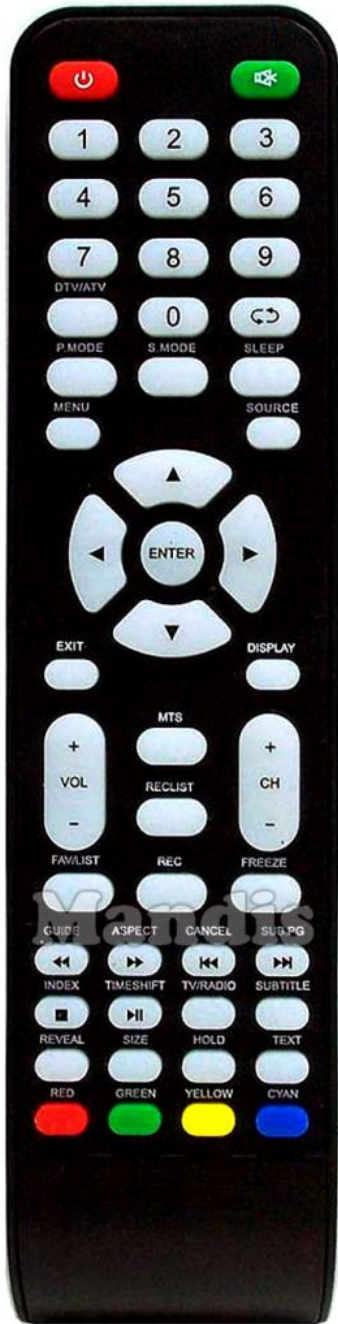
































Original	Replacement
Freeze	Pause / Step / Freeze
Guide	Guide / EPG / -/--
<<<	<<< / Tune-
>>> / Aspect	>>> / Tune+
>>> / Aspect	Shift + Picture / Format
I<<< / Cancel	I<<< / Preset-
I<<< / Cancel	Shift + Exit / Cancel / Clear
>>I / Sub.PG	>>I / Preset+
Stop / Index	Stop / Hold
Play/Pause / Timeshift	Play / Slow
Tv/Radio	TV/Radio /
Subtitle	Subtitle / EQ
Reveal	Eject / Surround
Size	Zoom / Size
Hold	Shift + Stop /
Text	Text / Goto
Red	Red / Netflix / Search

Original	Replacement
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random






Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 D.Menu / Top
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Replacement
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 MTS	 Info / Angle
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode



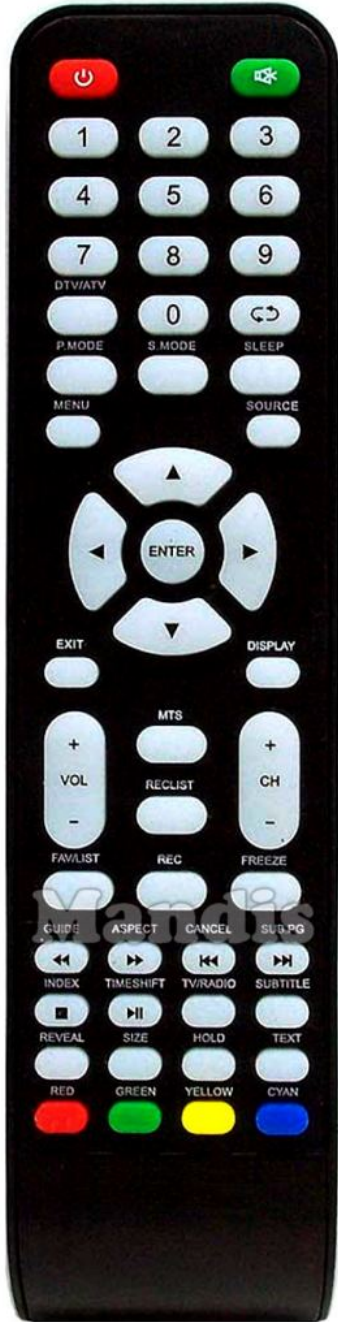

Original	Replacement	Original	Replacement
	Freeze		Pause / Step / Freeze
	Guide		Guide / EPG / -/-
	<<		<< / Tune-
	>> / Aspect		>> / Tune+
	>> / Aspect		Shift + Picture / Format
	I<< / Cancel		I<< / Preset-
	I<< / Cancel		Shift + Exit / Cancel / Clear
	>>I / Sub.PG		>>I / Preset+
	Stop / Index		Stop / Hold
	Play/Pause / Timeshift		Play / Slow
	Tv/Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	Reveal		Eject / Surround
	Size		Zoom / Size
	Hold		Shift + Stop /
	Text		Text / Goto
	Red		Red / Netflix / Search
			Green
			Yellow
			Cyan
			Green / APP / Repeat
			Yellow / YouTube / Repeat
			Blue / Prime Video / Random

