



Original		Replacement		Original		Replacement	
	Power		Power		0		0
	TV-Out		AV		I<< Previous		I<<
	Green / Source		Green		>>I Next		>>I
	Green / Source		Shift + AV		Mute		Mute
	Red / Rec		Red		Stop		Stop
	Yellow / Time		Yellow		Play / Pause		Play
	Blue / Setup		Blue		Play / Pause		Pause
	Blue / Setup		Options		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Home		Smart
	3		3		Home		Menu
	4		4		Up / +15		Up
	5		5		Down / -15		Down
	6		6		Left / REW		Left
	7		7		Right / FF		Right
	8		8		OK		Ok
	9		9		Return		Back





	Original	Replacement	Original	Replacement
	 Info	 Info		
	 EPG	 Guide		
	 Media	 Media		
	 Eject	 Eject		
	 i-Radio	 TV/R		
	 Goto	 3D		
	 Slow	 Shift + Right		
	 A-B	 Text		
	 Shuffle	 Shift + Text		
	 Zoom	 Shift + Eject		
	 Rotate	 Format		
	 Book Mark	 Pre Ch		
	 Sleep	 Sleep		
	 DVD Menu	 D. Menu		
	 Audio	 Dual		
	 S.Title	 Subt		
	 Sync	 List		

