



Original	Replacement	Original	Replacement
	Power		Vol-
			Vol+
	Back		CH- / Page-
	Menu		Red / Netflix / Search
	Up		Green / APP / Repeat
	Left		Yellow / YouTube / Repeat
	Ok		Blue / Prime Video / Random
	Right		Mute / Dimmer
	Down		Rec / Rec Mode
	Exit		Source
	Stop		Option
	Smart Tv		Subt.
	Skip Prev.		IPTV
	Play		Eco / Search
	Pause		Guide-Popup
	Skip Next		Ch.List
	Ch+		Info





Original		Replacement	
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
DISC MENU	Disc Menu	TOP MENU D.MENU	D.Menu / Top
0	0	HDMI - BAT 0	0
TEXT MEDIA CENTER	Text / Media	GOTO TEXT	Text / Goto
SOUND	Sound	TITLE SOUND	Sound / Title
☐ ↑ ↓ → ←	Repeat	SIZE ZOOM	Zoom / Size
REPEAT	Repeat	SHIFT + APP REPEAT	Shift + Green / APP /

Original	Replacement





Original	Replacement	Original	Replacement
	Power		Power
	(•J)		TV/Radio /
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	Iptv		Display / Media
	Eco/Search		Fav / Marker / PC
	Guide/ Popup		Guide / EPG / -/-
	Ch.List		Shift + Smart / List
	Info		Info / Angle





	Original		Replacement	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	Disc Menu		D.Menu / Top	
	0		0	
	Text/ Media		Text / Goto	
	Sound		Sound / Title	
	Repeat		Shift + Green / APP /	

Original	Replacement

